


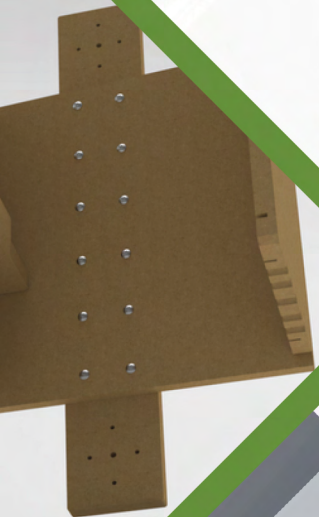


Squirrel Boxes

Sentinel Wachtower Installation Guide



D2 Camera Box

Exploded View

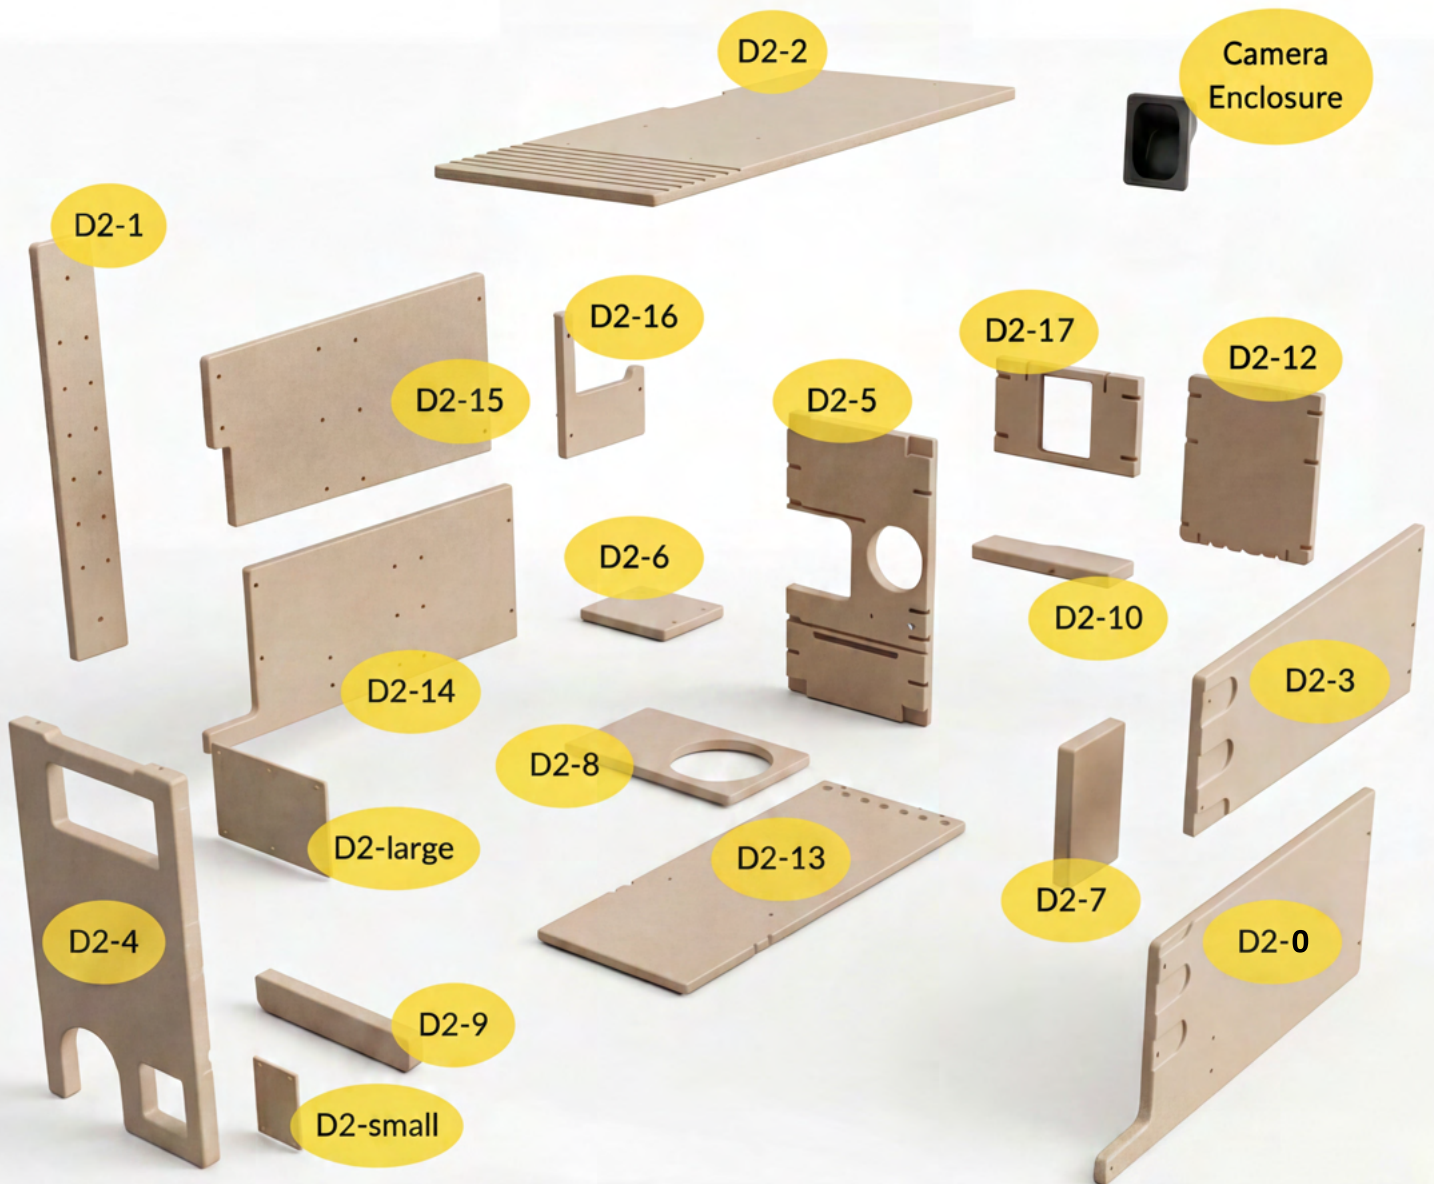

Camera enclosure part numbers:

SB-CAME-BLINK details-blink camera enclosure blink outdoor 2k / blink outdoor 4

SB-CAME-Google-nest-outdoor details: google nest outdoor camera enclosure

SB-CAME-ARI OP6 details: arlo pro 6 outdoor camera enclosure

SB-CAME-ARLOE details: arlo essentials outdoor camera enclosure


SB-CAME-ARLOGO2 details: arlo go2 outdoor camera enclosure

SB-CAME-RINGOP details: ring outdoor plus camera enclosure


Two Circles are Included to place behind the back board to level out the box before screwing into the tree



Installation Guide

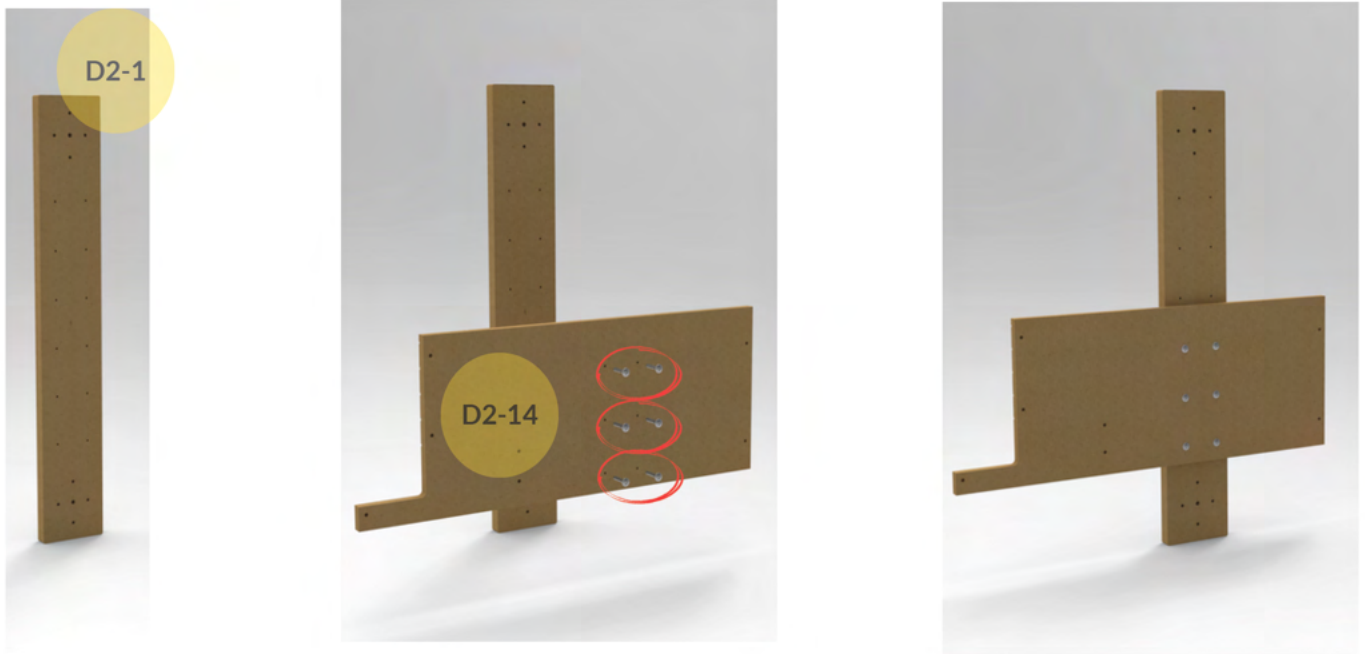


Attach part D2-14 to part D2-1

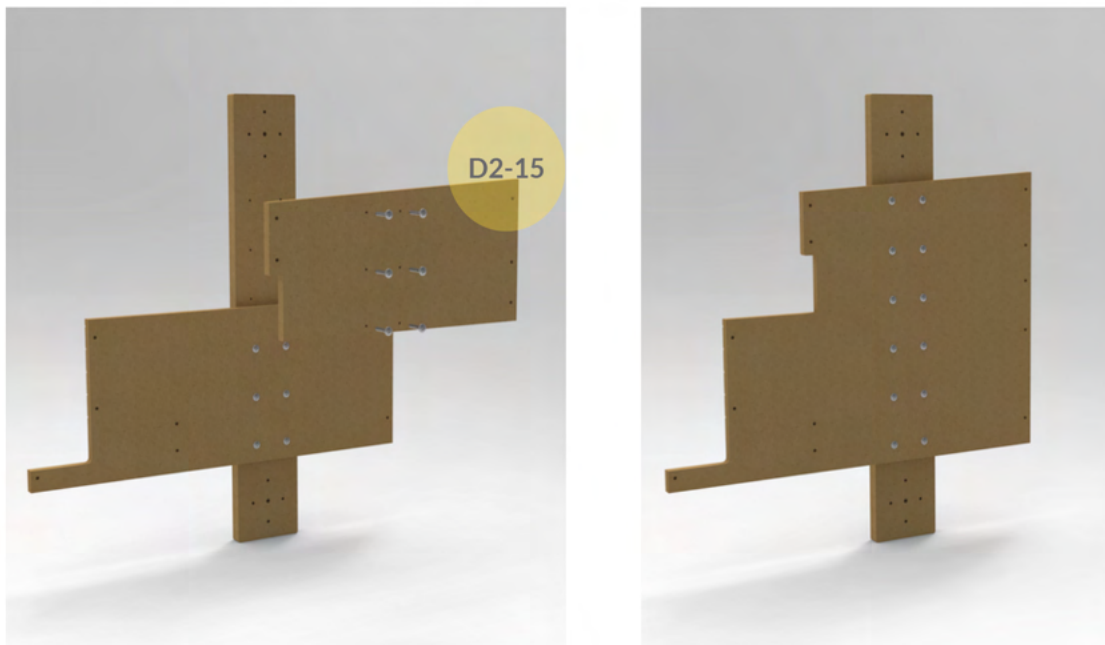

Attach part D2-15 to Assembly

Use 1 1/4 inch screws included



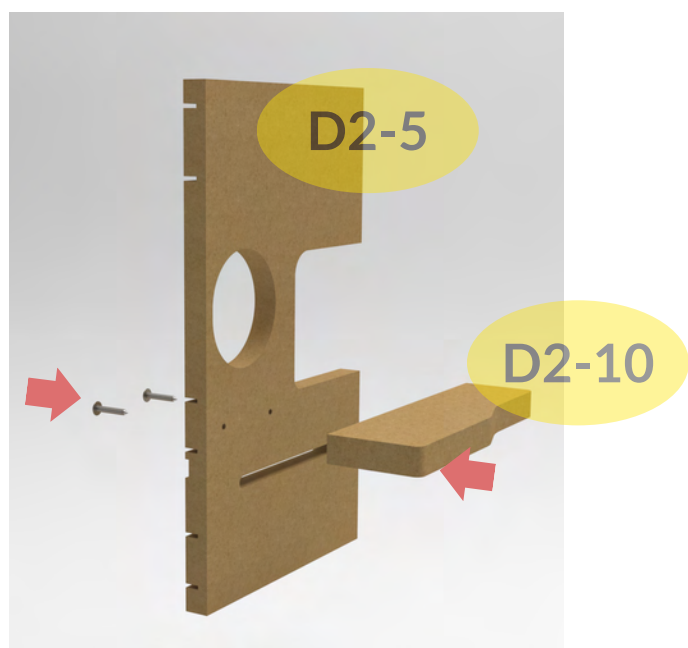

Screw the part D2-10 to D2-5





**Take off the protective blue film before installing the windows.
Attach the windows with small screws**







Installation Guide

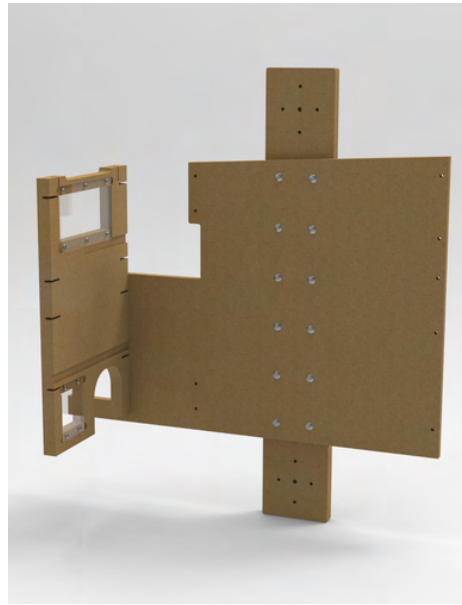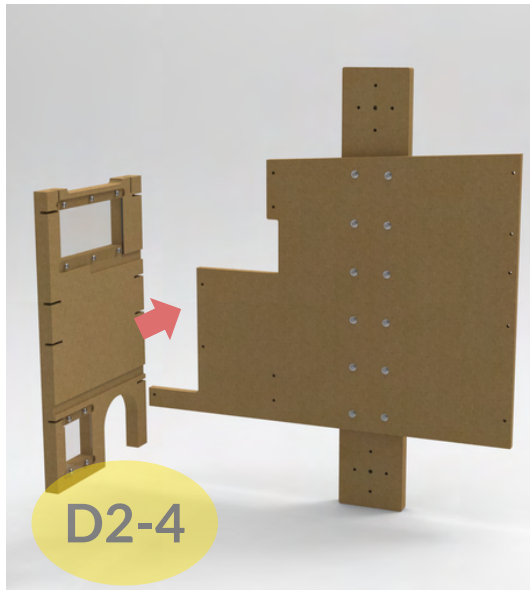



Attach D2-4 to assembly .

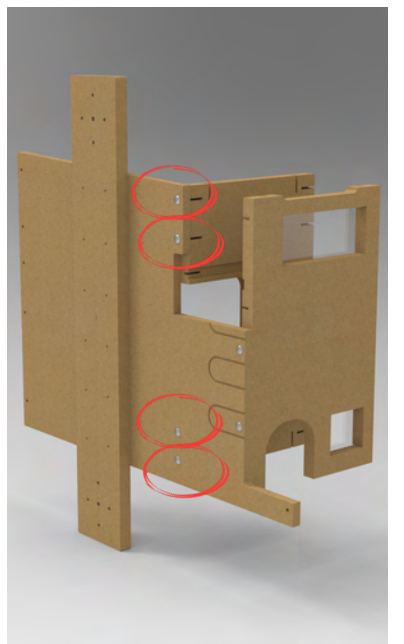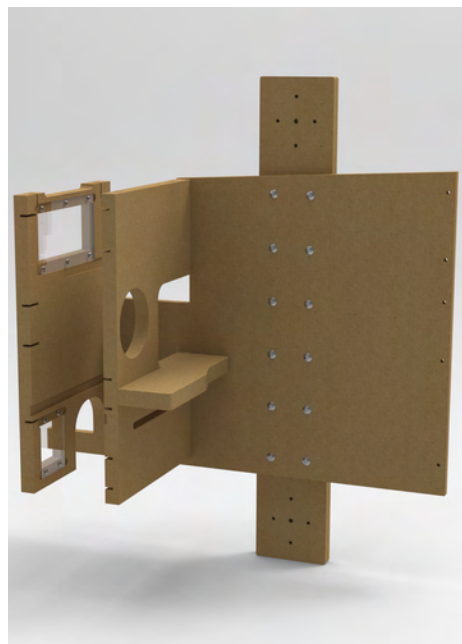



Screw the D2-5 Assembly to main assembly



Installation Guide

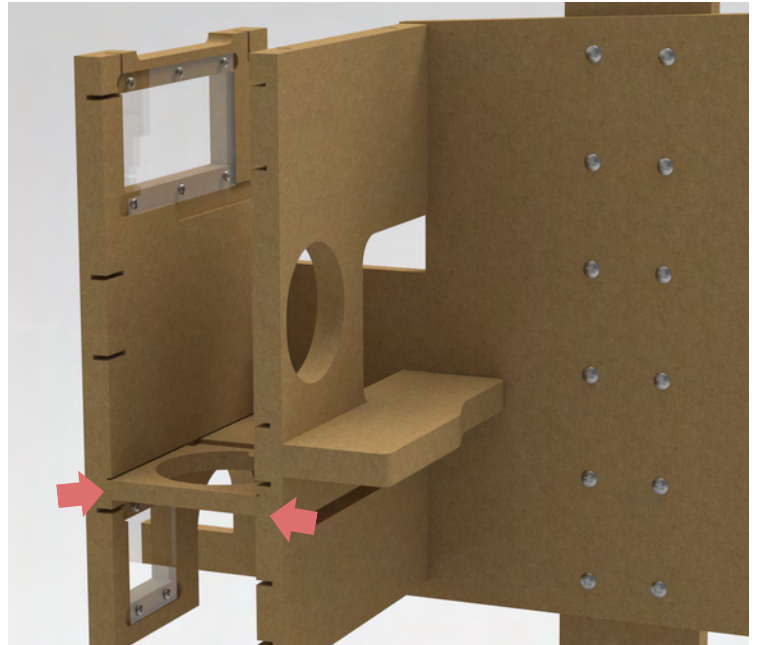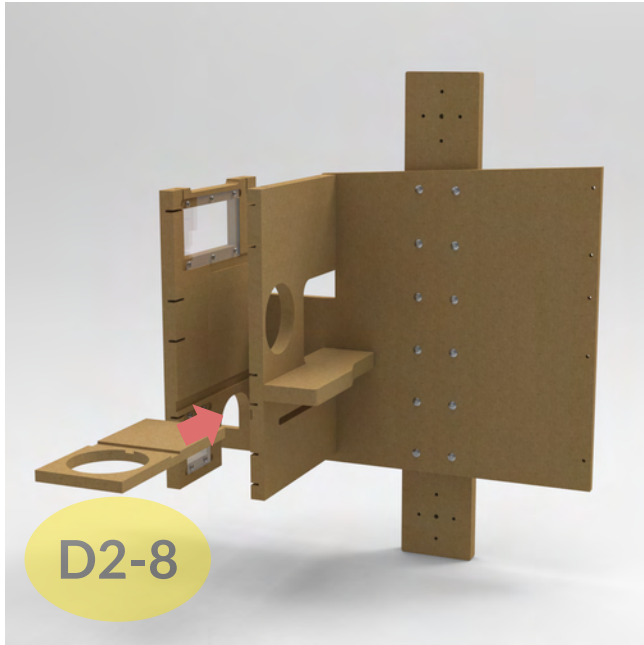


Slide D2-8 into assembly.

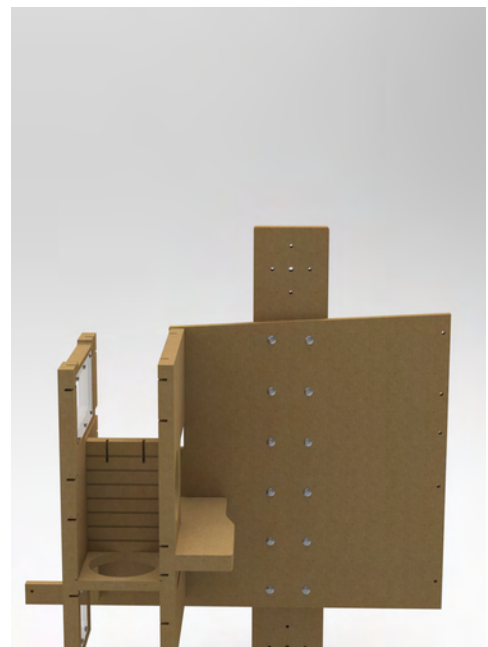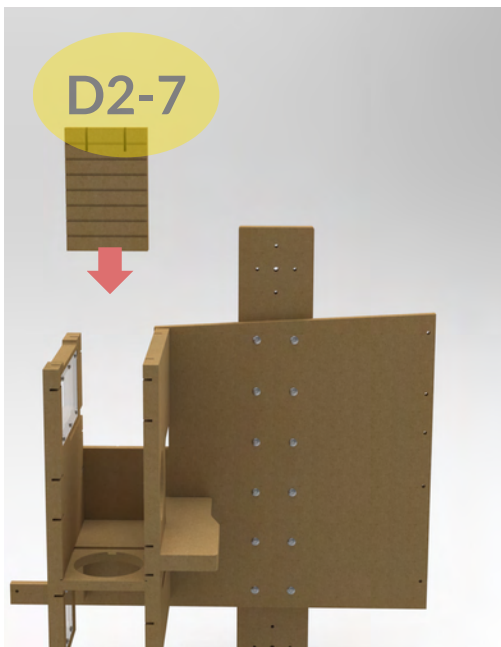


Slide D2-7 into assembly.



Installation Guide

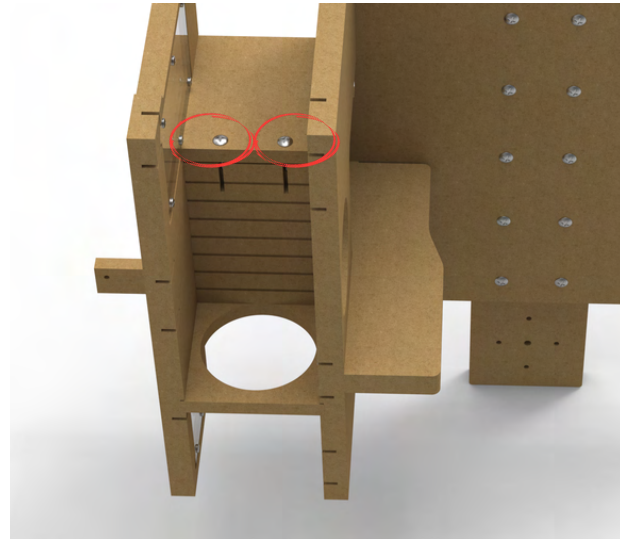


Slide D2-6 into assembly and screw to assembly.

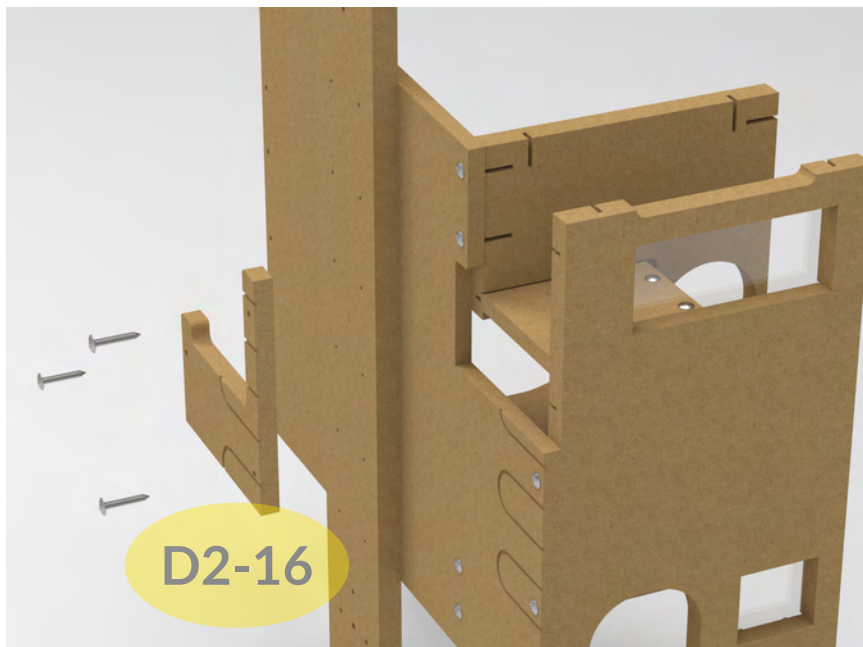



Screw D2-16 into assembly.



Installation Guide

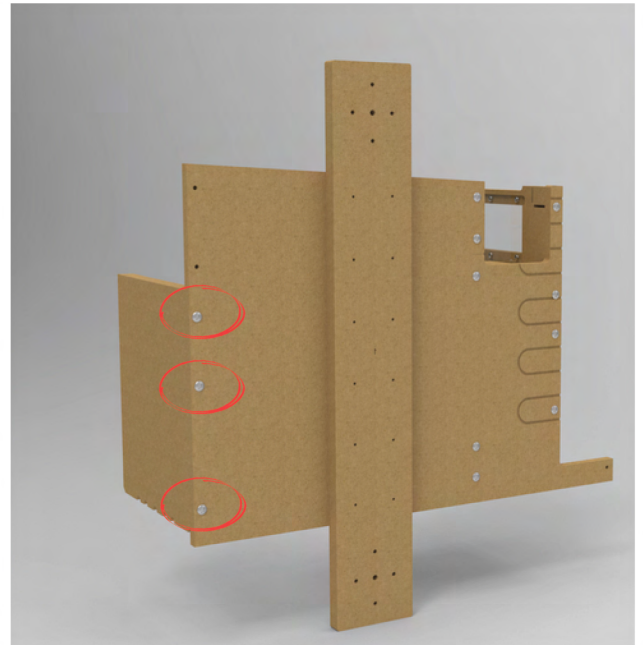



Screw D2-12 into assembly.

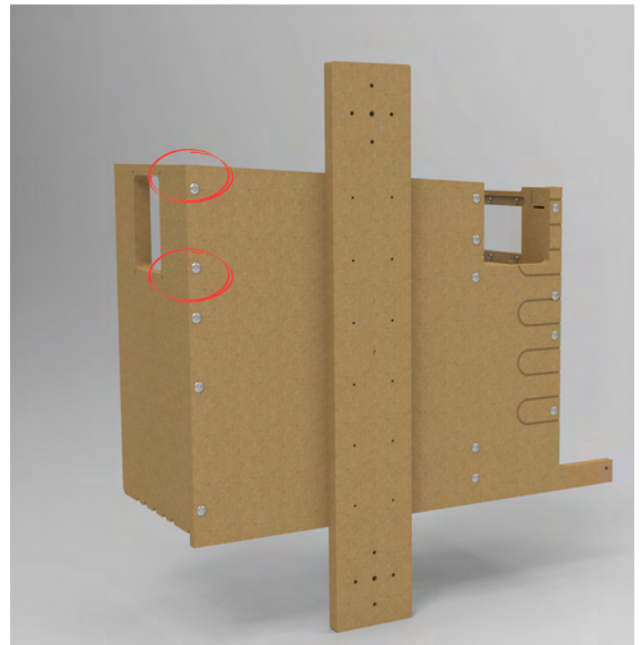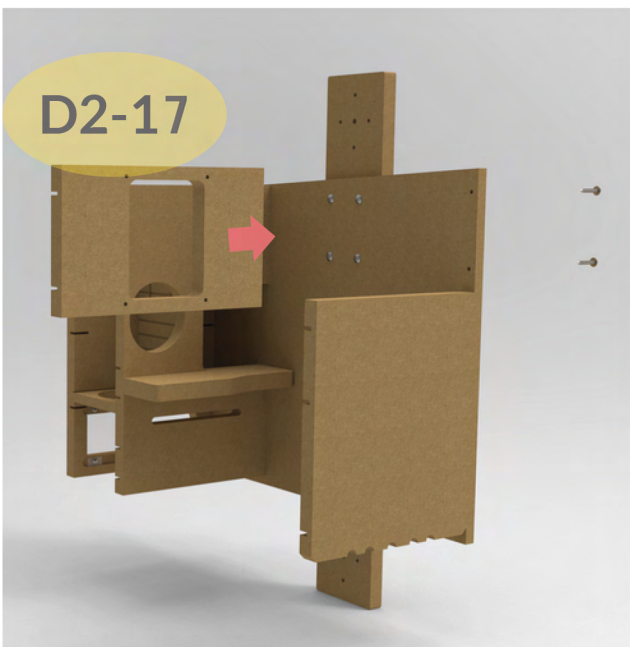



Screw D2-17 into assembly.



Installation Guide

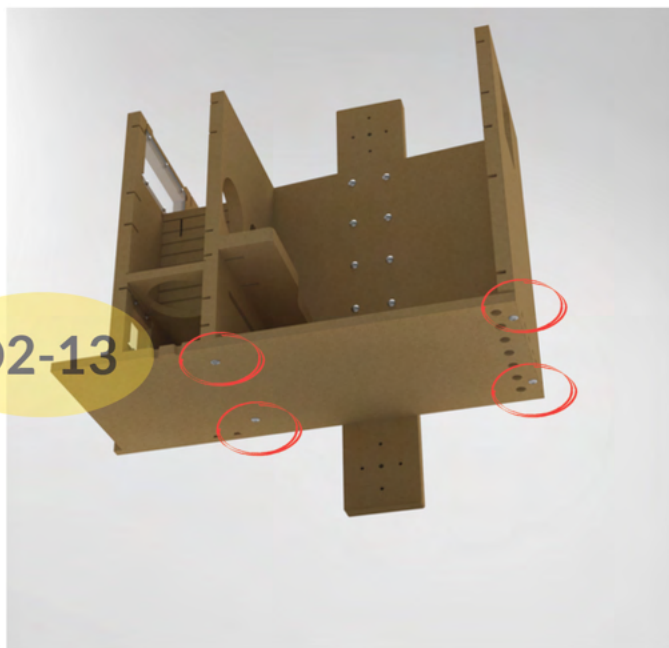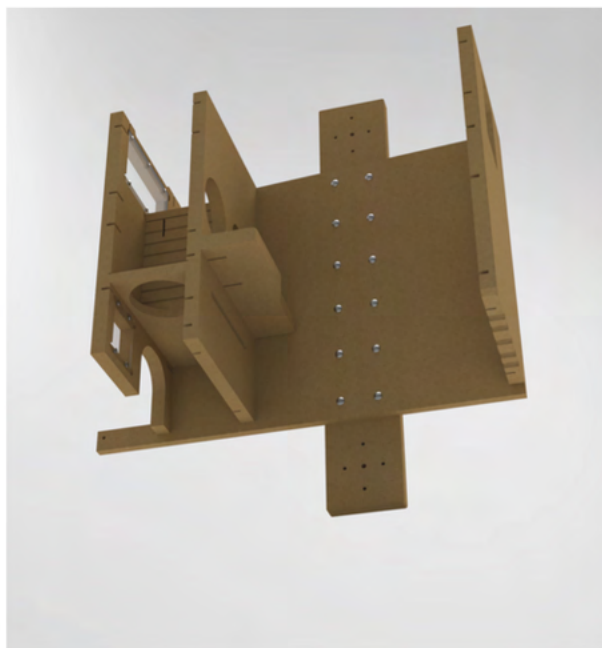



Screw D2-13 to bottom of assembly.

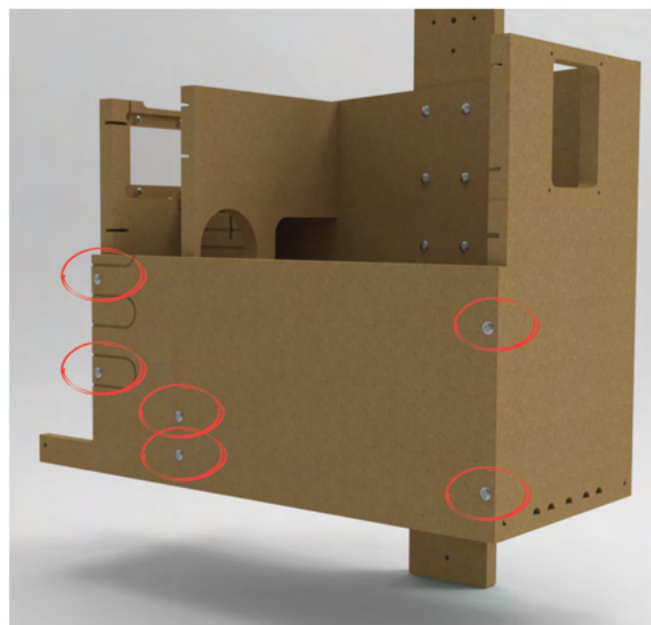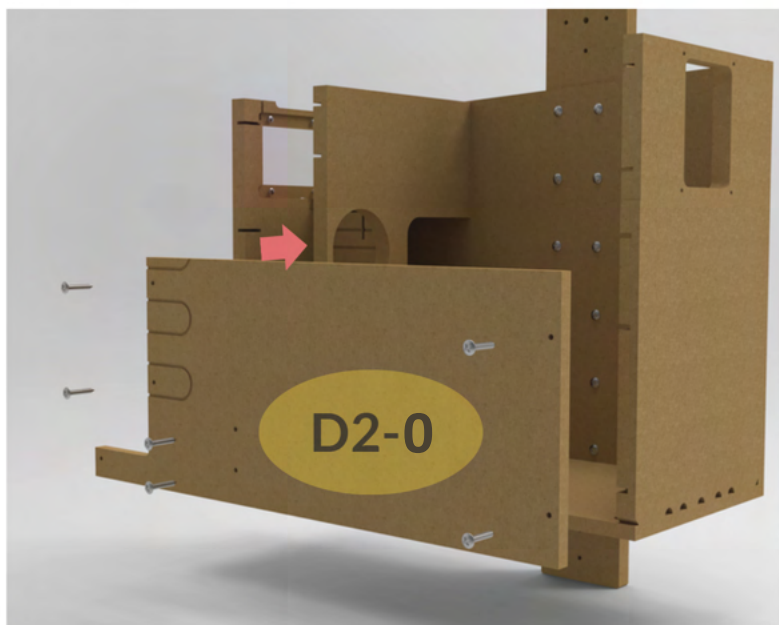



Screw D2-0 into assembly.



Installation Guide

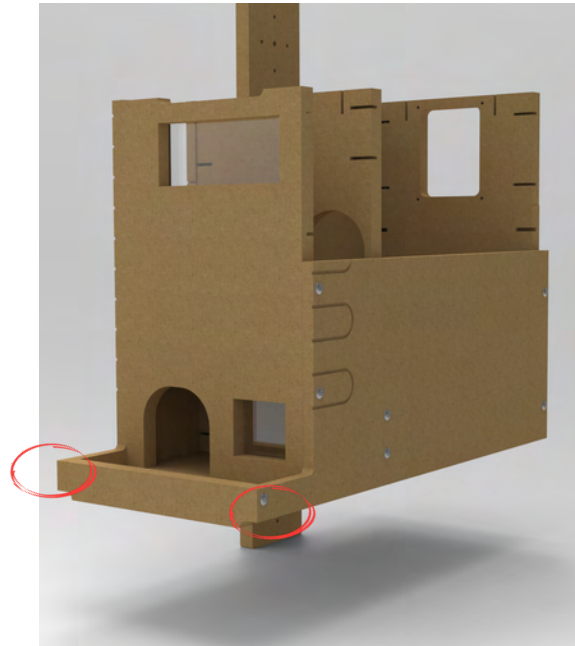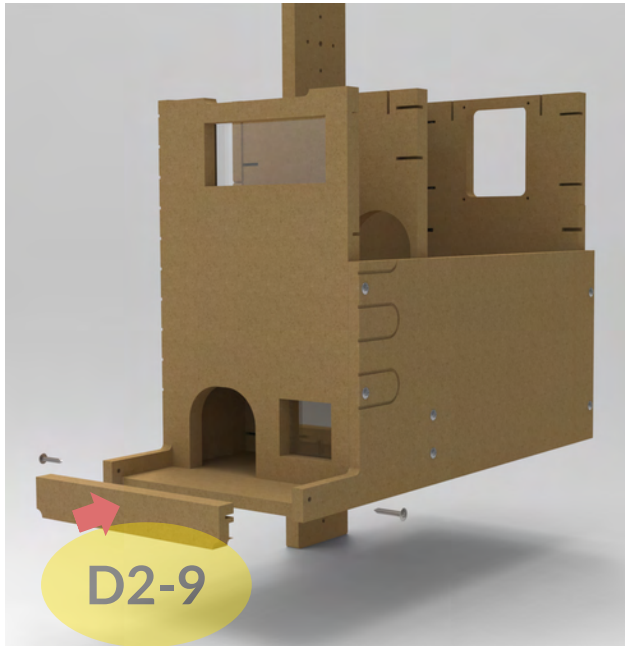



Screw D2-9 to bottom of assembly.

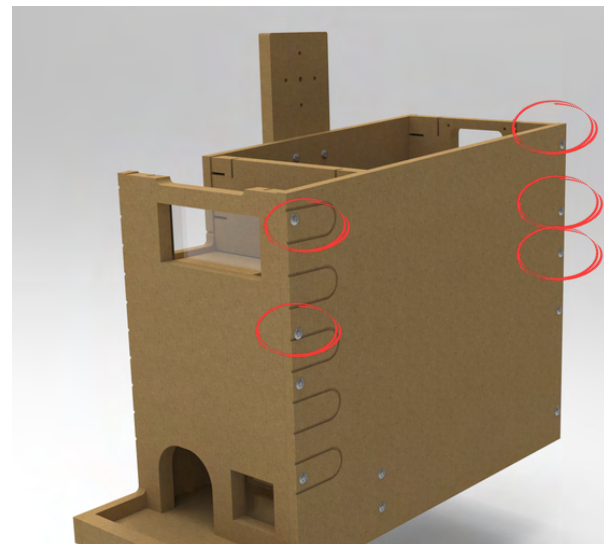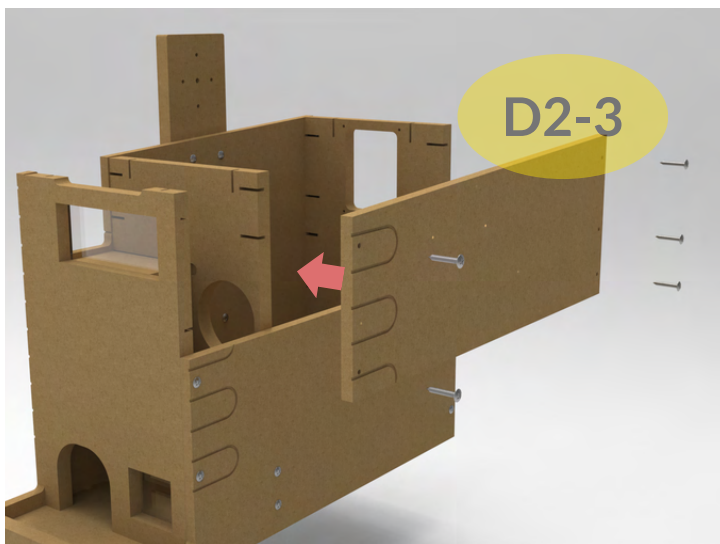



Screw D2-3 to assembly.



Installation Guide

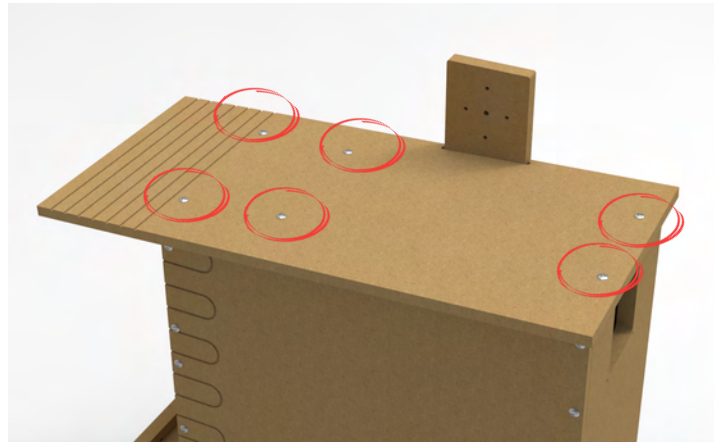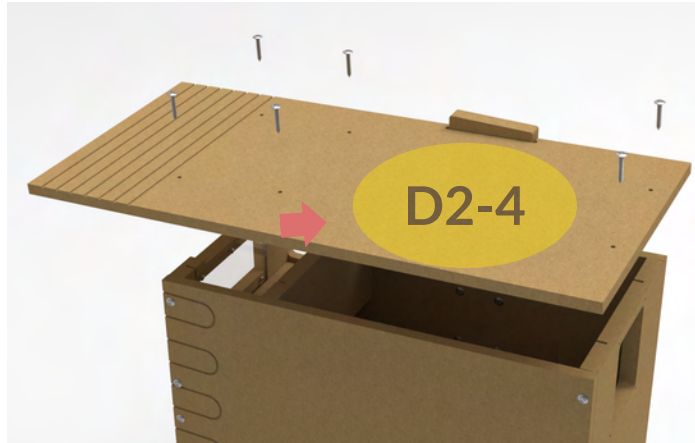

Screw D2-2 into assembly.

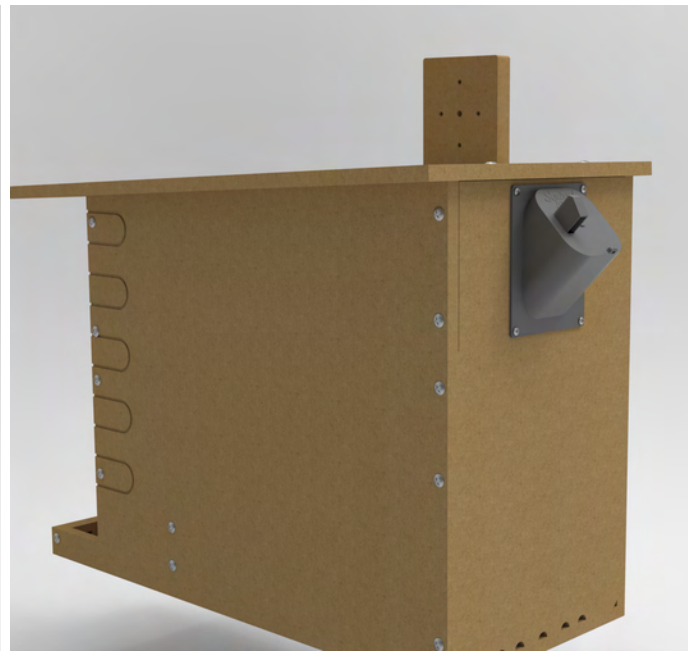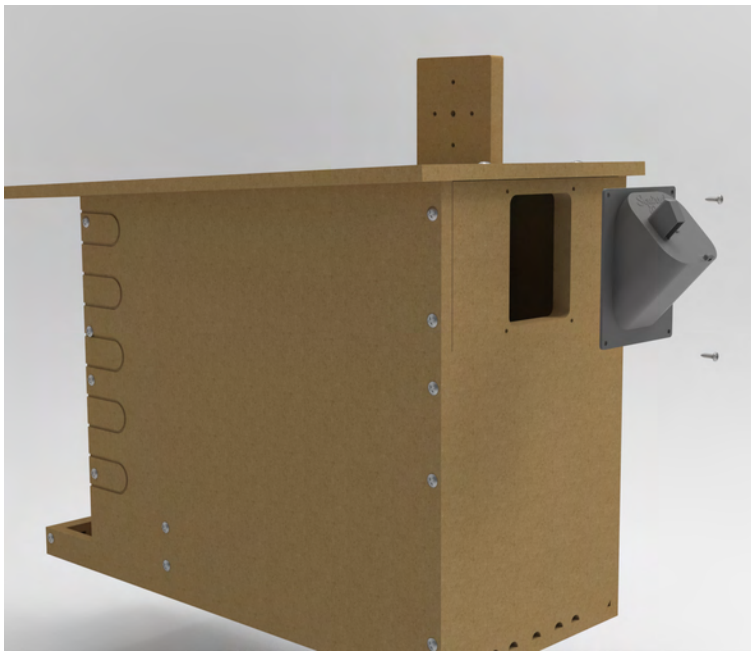

Screw the camera enclosure

Camera Installation Guide



Remove the back cover from the Blink Outdoor 4 camera.

Insert the power cable through the 3D-printed bracket.

Plug the power cable into the USB-C port on the Blink camera.

Place the camera into the included bracket with the power cable installed.

Secure the Blink camera to the bracket using the included washer and screw.

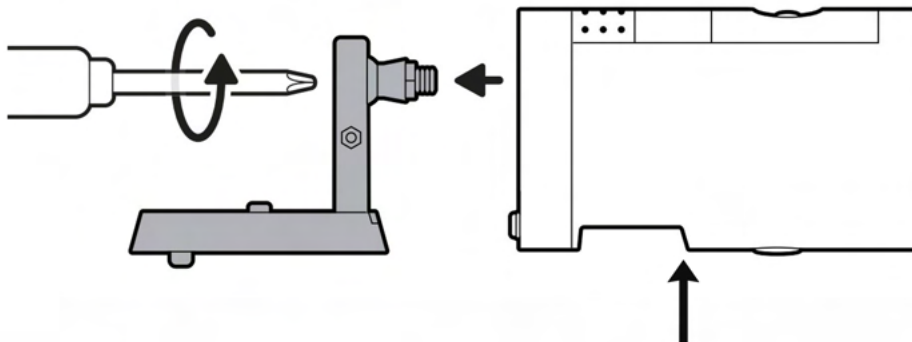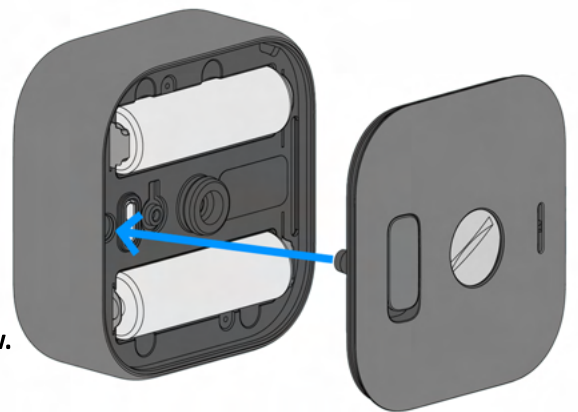

Remove the stand from the Ring camera.

USB-C

Insert the USB-C power cable into the back of the Ring camera.

Place the Ring camera, with the power cable connected, into the 3D-printed bracket.



Squirrel Boxes



facebook

MOUNT WITH CARE



Please be careful when mounting your box to avoid bending or flexing the rear tree hanger. Doing so can place unnecessary stress on material and may cause it to break.

Make sure the box is mounted level so that water can properly drain and not collect inside the hallways. A level installation keeps the

