




Squirrel Boxes

The Nutsonian Assembly Guide



Nutsonian Exploded View

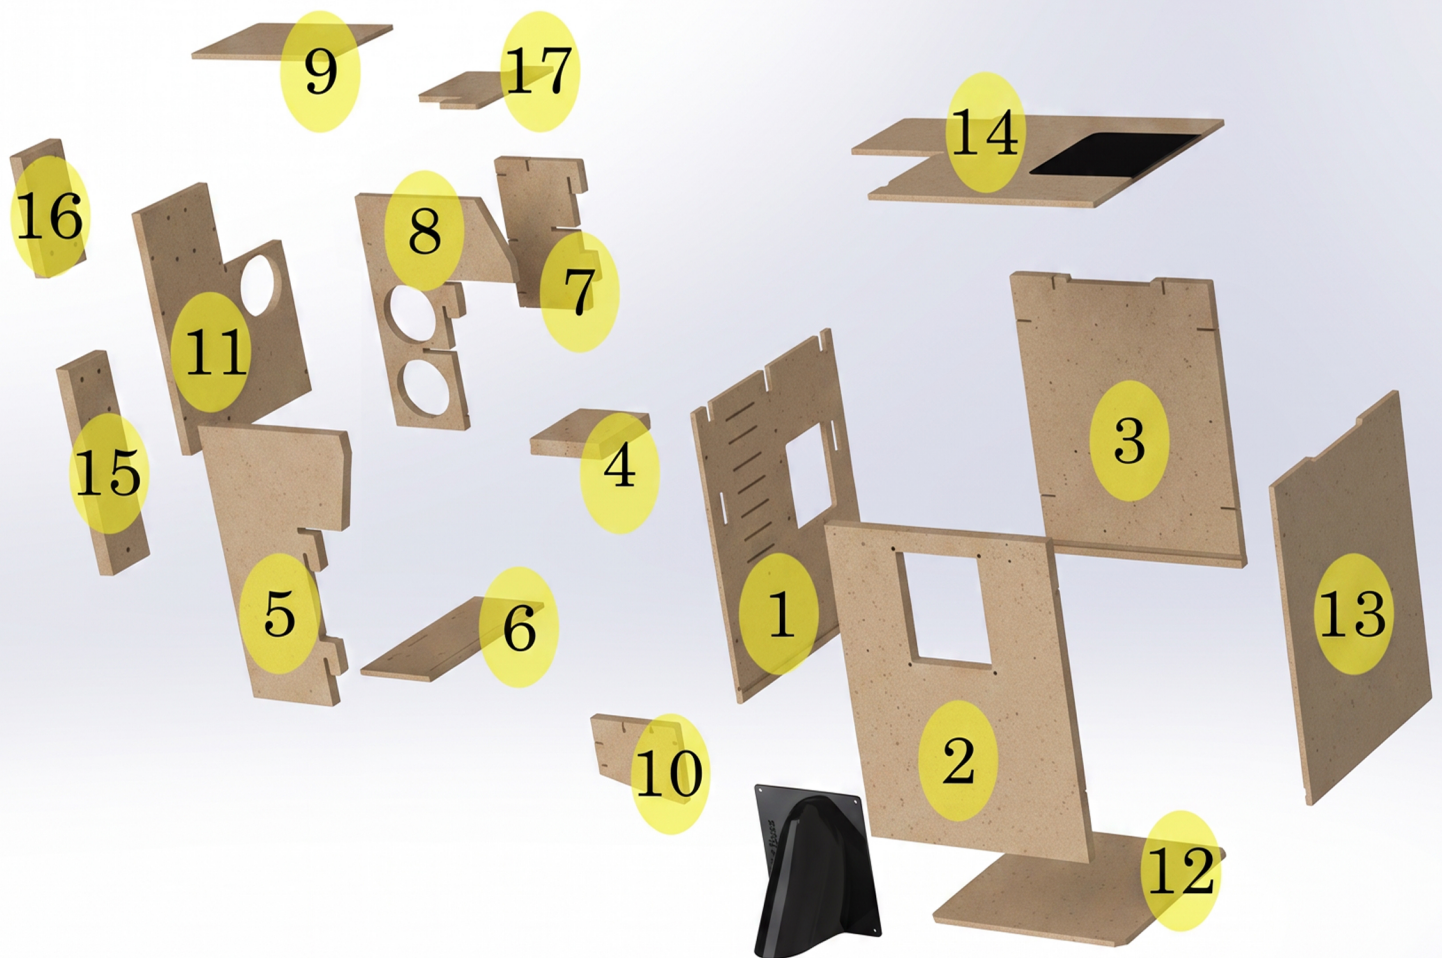

Camera enclosure part numbers:

SB-CAME-BLINK details: blink camera enclosure blink outdoor 2k / blink outdoor 4

SB-CAME-ARLOP6 details: arlo pro 6 outdoor camera enclosure

SB-CAME-ARLOE details: arlo essentials outdoor camera enclosure

SB-CAME-ARLOGO2 details: arlo go2 outdoor camera enclosure

SB-CAME-RINGOP details: ring outdoor plus camera enclosure

Two Circles are included to
place behind the back board to level out
the box before screwing into the tree



Most adjoining pieces do not have pre-drilled holes; insert each screw through the pre-drilled hole and into the corresponding slot to avoid splitting the material.



Installation Guide



Attach Part #1 to
Parts #2 and #3.

Installation Guide




Attach Part #6 to Part #7

Installation Guide



Attach Part #5 to Part #6

Installation Guide

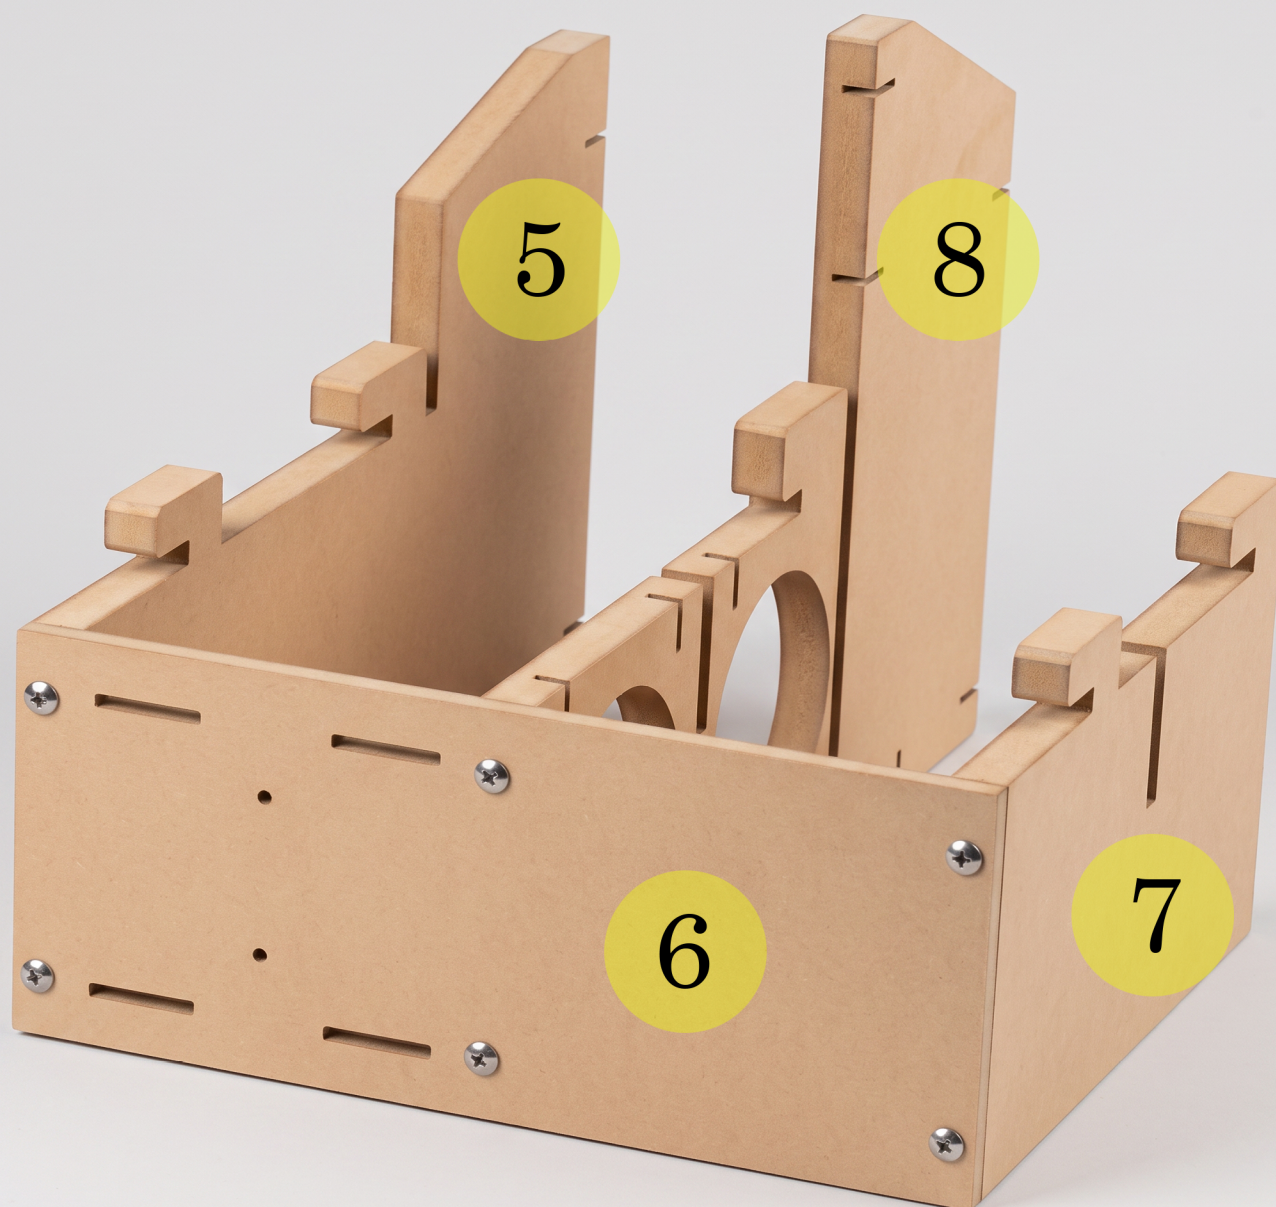

Attach Part #8 to Part #6

Installation Guide




Attach Part #9
to Part #8 and #5

Installation Guide



Insert Part #17
into Part #8 and #7

Installation Guide

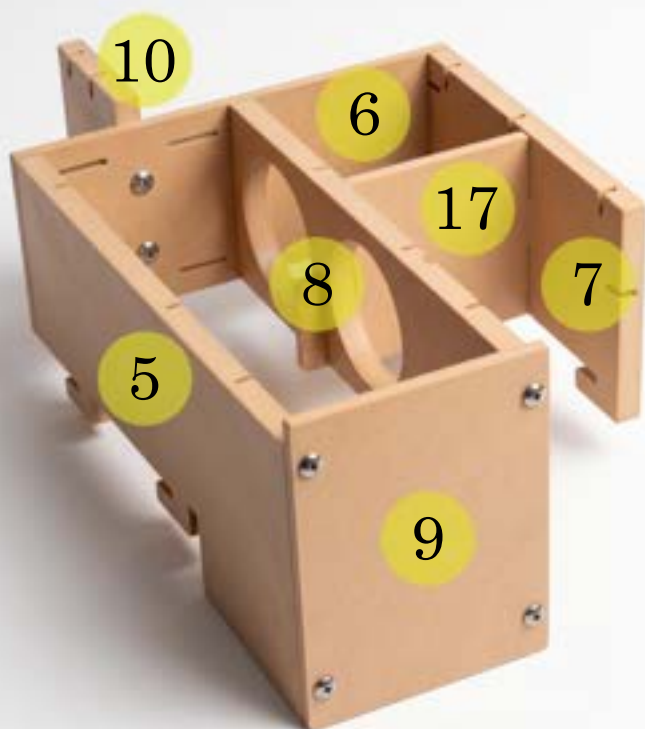

Attach Part #10
to Part #6

Installation Guide



Attach Part #4
to Part #1 and Part 3

Installation Guide



Insert the
hooks into the matching slots,
then slide the two assemblies together
until they are fully seated

Installation Guide



Ensure both sides
fit together securely

Installation Guide



Screw Part #1 into Part #10
Screw Part #1 into Part #8

Installation Guide



Attach Part #11

Installation Guide



Slide on Part #14 and screw it down
If Part #14 is hard to get on go back to step 12
and loosen the screws to install the roof
Then tighten them back up after the roof is installed

Line the arrow with Part #12 and Part #1
So it is installed correctly




Installation Guide



Screw under Part #14 into Part #8
Attach Part #13

Installation Guide

Red #10 8 Screws
Yellow #6 2 Screws

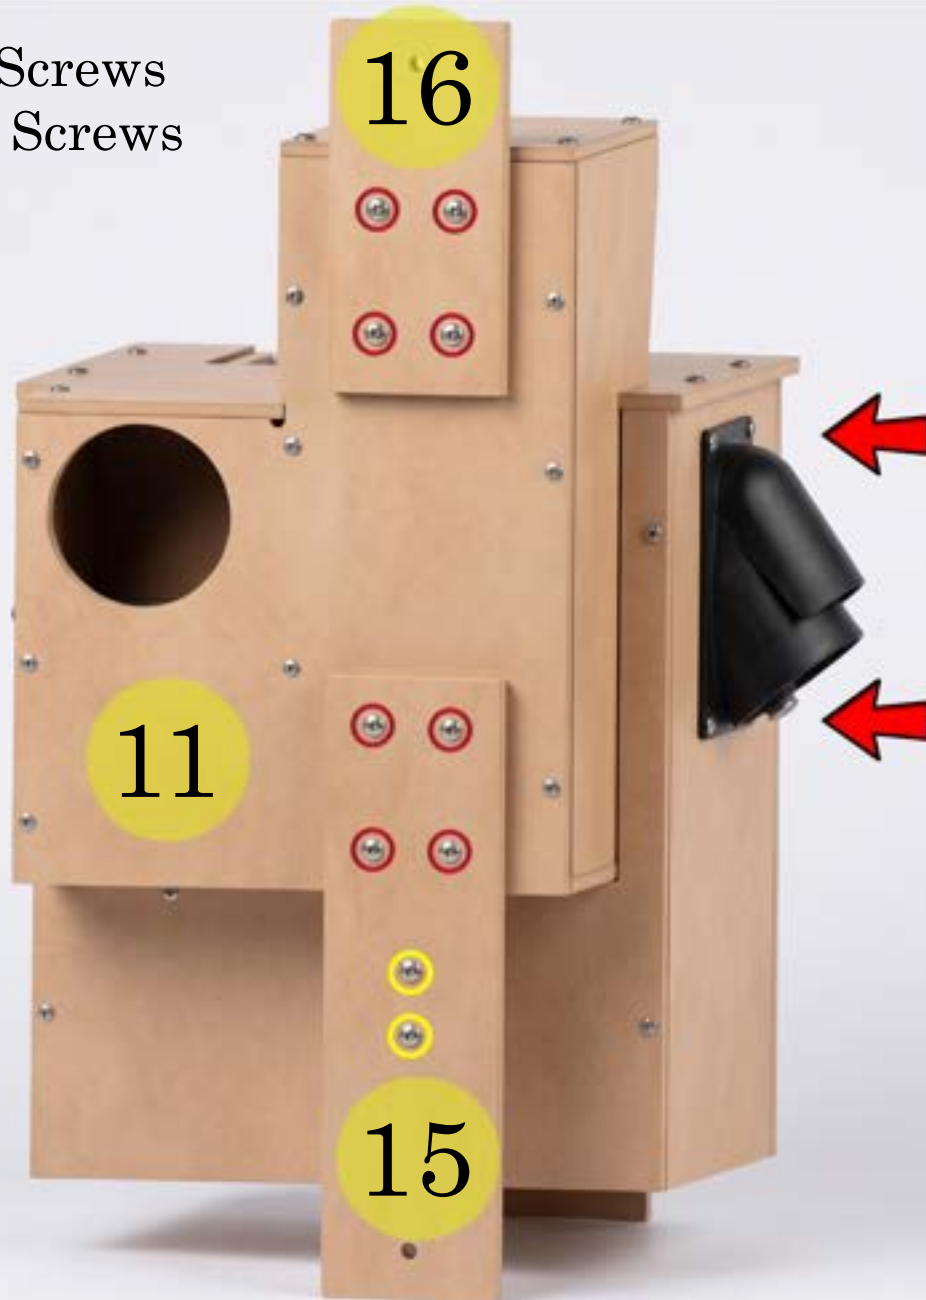

Screw in 12 screws to Part #16 and Part #15

Run Power Solar or Wired into the camera

Install the camera into the housing
and secure with the included screw

Install the camera mount with the 4 included screws



Camera Installation Guide

Power Required Solar or Hardwired



Remove the back cover from the Blink Outdoor 4 camera.

Insert the power cable through the 3D-printed bracket.

Plug the power cable into the USB-C port on the Blink camera.

Place the camera into the included bracket with the power cable installed.

Secure the Blink camera to the bracket using the included washer and screw.

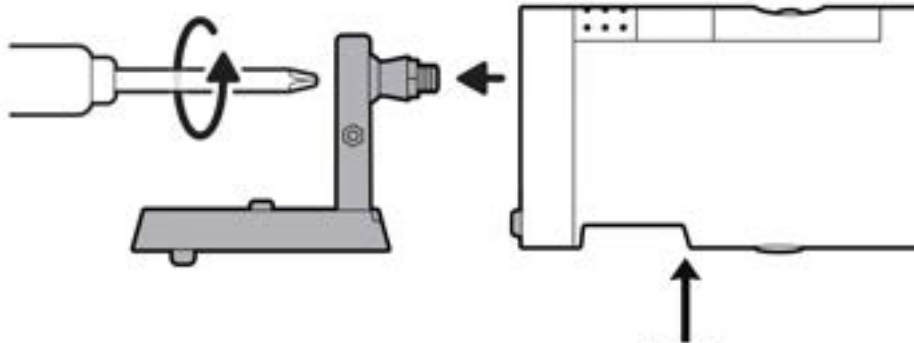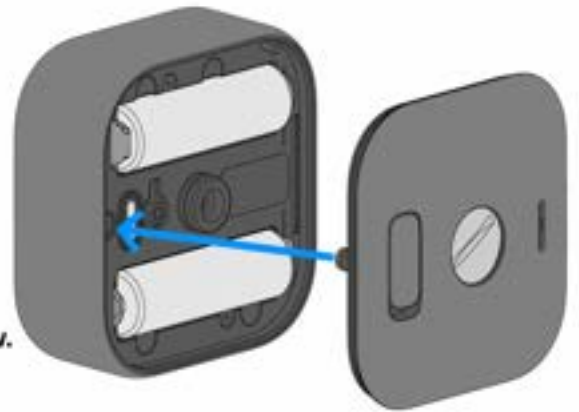


Remove the stand from the Ring camera.

USB-C

Insert the USB-C power cable into the back of the Ring camera.

Place the Ring camera, with the power cable connected, into the 3D-printed bracket.

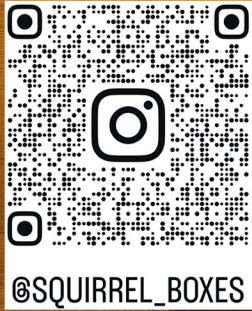

Squirrel Boxes



facebook

MOUNT WITH CARE



Please be careful when mounting your box to avoid bending or flexing the rear tree hanger. Doing so can place unnecessary stress on material and may cause it to break.

Make sure the box is mounted level so that water can properly drain and not collect inside the hallways.

